
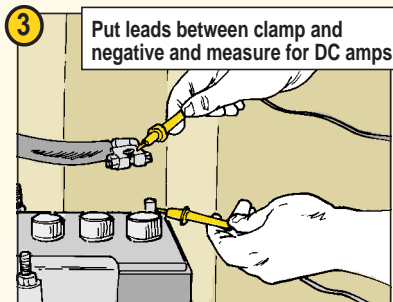
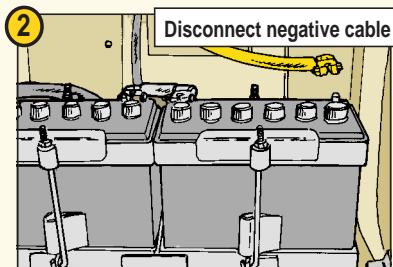


Losing Battery Power?

Are you going through batteries on your 5- and 10-KW tactical quiet generators like food through a goose?

There's a good chance that batteries are dying because current is leaking out through the battery charging alternator circuit.

Do this test:

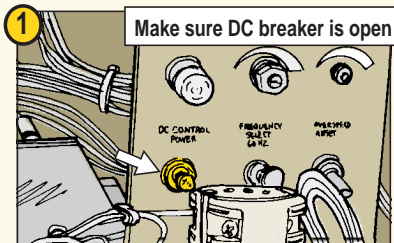

A reading below 5 milliamps is OK. Above that and you've got a leak problem.

Chances are the problem stems from the diode pack, NSN 5961-01-331-3974 or NSN 5961-01-330-7886, in the battery charging alternator, NSN 6115-01-368-2911.

ONCE YOU'VE DISCOVERED THE LEAK, GET YOUR DS TO CHECK THE DIODE PACK AND REPLACE IT, IF NECESSARY.